

**Panasonic**

***8X PORTABLE CD-ROM Player***

Model No. **KXL-783M**

**Operating Instructions**



Please read this manual before using and store in a safe place for future reference.

## Thank you for purchasing the Panasonic 8X PORTABLE CD-ROM Player KXL-783M.

### WARNING

- The power source voltage of the AC adaptor is listed on the nameplate. Plug the AC adaptor only into an outlet with the proper voltage.
- To prevent fire or shock hazard, do not expose this product to rain or any type of moisture.

### CAUTION

- When you operate this equipment, the mains socket-outlet should be near the equipment and should be easily accessible.
- To prevent the SCSI interface connector from static electricity damage, before you touch it, discharge any static electricity from your hands by touching a grounded metal surface, such as the screw on the plate cover of an electrical outlet.

### CAUTION FOR LASER

This product utilizes a laser.

Use of control, adjustment or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not open covers and do not repair yourself. Refer servicing to qualified personnel.

#### Laser diode properties

Material	GaAlAs
Laser output	Less than 52.65 $\mu$ W
Wave length	790 nm
Emission duration	Continuous

(This output is the value measured at the distance of 200 mm from the objective lens surface.)

The serial number of this unit may be found on the label located at the bottom of the unit. Write this number below and keep this book along with your proof of purchase to serve as a permanent record of your purchase or for future reference.

For warranty service you may be required to show your proof of purchase records.

MODEL NO. **KXL-783M** NAME OF DEALER \_\_\_\_\_

SERIAL NO. \_\_\_\_\_ DATE OF PURCHASE \_\_\_\_\_

## FOR USERS IN UNITED STATES ONLY

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The user may find the booklet "Something About Interference" available from FCC local regional offices helpful.

**FCC Warning:** To assure continued FCC emission limit compliance, the user must use only the recommended shield interfacing cable when connecting to a host computer. Also, any unauthorized changes or modifications to this equipment would void the users authority to operate this device.

- Certain audio features of this product manufactured under a license from Desper Products, Inc.  
*Spatializer*® and the circle-in-square device are trademarks owned by Desper Products, Inc.
- FWB, CD-ROM ToolKit™, CDT Remote™ and the FWB logo are trademarks of FWB Software, LLC.
- Apple, PowerBook, Macintosh, QuickTime, AppleLink, Finder and Apple logo are trademarks of Apple Computer, Inc.
- Photo CD is a trademark of Eastman Kodak Company.
- Adobe Photoshop is a trademark of Adobe System, Inc., which may be registered in certain jurisdictions.

All other brands and product names are trademarks or registered trademarks of their respective companies.

Specifications given in these Operating Instructions are subject to change without notice.

All Rights Reserved, © COPYRIGHT 1996 KYUSHU MATSUSHITA ELECTRIC CO., LTD.

## ■ Features:

- **8X external CD-ROM drive** (transfer rate Max. 1200 KB/s with AC adaptor).
- **Operates on a compact lightweight universal voltage AC adaptor** (☞ P. 9), **optional rechargeable battery (KXL-D30)** (☞ P. 27) or **six (6) "AA" size alkaline batteries (not supplied)** (☞ P. 30).
- **Can be connected to a PowerBook with supplied SCSI cable** (☞ P. 10).
- **Can be connected to a Desktop Macintosh with purchase of SCSI cable (D-sub25 pin ↔ half-pitch 50 pin) for Macintosh** (☞ P. 11).
- **Both CD-ROM and audio CD can be played when connected to your Macintosh** (☞ P. 19).
- **Can be used as a portable personal audio CD player** (☞ P. 17).
- **Supports CD-ROM, CD-ROM XA, CD-DA (Audio CD), Photo CD (Multisession compatible), CD Extra.**
- **SPATIALIZER delivers 3-Dimensional stereo surround sound. Expands the sound from two conventional speakers.**
- **PC sound can be heard through the built-in stereo speakers of the player with the supplied stereo audio cable connected** (☞ P. 25).
- **SCSI-2 Software Command compatible.**
- **Can be used as Boot Device-System Startup from CD-ROM** (☞ P. 21).

### Important:

- Please use CD-ROMs with the marking below.



- Please use audio CDs with the marking below.



# Table of Contents

## Before Use

Accessories . . . . .	6
Precautions . . . . .	6
Part Names . . . . .	7



## Preparation & Connection

Connecting the AC adaptor . . . . .	9
Connecting the Player to Macintosh . . . . .	10
For PowerBook . . . . .	10
For Desktop Macintosh . . . . .	11
Software Installation . . . . .	12
Before installing software . . . . .	12
Installation . . . . .	13
Inserting/Removing a CD . . . . .	16



## Operation

Using the Player Independently . . . . .	17
Playing an audio CD . . . . .	17
Using the Player with Macintosh . . . . .	19
Playing a CD-ROM . . . . .	20
Starting up Macintosh from a CD-ROM . . . . .	21
Playing an audio CD . . . . .	21
Listening to PC sound through the player . . . . .	25
Details of CD-ROM ToolKit . . . . .	26



## Using Battery

Using Rechargeable Battery (option) . . . . .	27
Installing rechargeable battery . . . . .	27
Charging rechargeable battery . . . . .	28
Refreshing rechargeable battery . . . . .	29
Replacing rechargeable battery . . . . .	29
Using Alkaline Batteries (not supplied) . . . . .	30



## Troubleshooting & Maintenance

Troubleshooting . . . . .	31
Maintenance . . . . .	36



## Technical Information

SCSI ID Number and Terminator Setting . . . . .	37
Specifications . . . . .	38



## Appendix


End-User License Agreement . . . . .	40
Index . . . . .	42
Option . . . . .	back cover




# Accessories/Precautions

## ■ Accessories

Make sure that the following accessories are included with the player. If anything is missing, contact your dealer immediately.

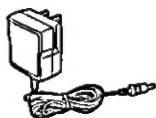

**AC adaptor** (P. 9)  
[The Model No. of AC adaptor is written on the bottom of the player.]

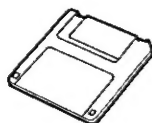

**Setup disk**  
(P. 12, 13)  
[Before opening the packet, please read P. 40.]




**SCSI cable**  
(for PowerBook)  
(P. 10)




**Audio cable**  
(P. 25)

- Operating instructions
- Warranty card


## ■ Precautions

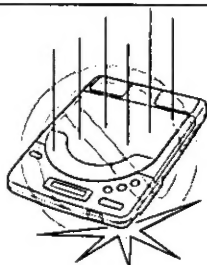


- Do not drop or jar the player.

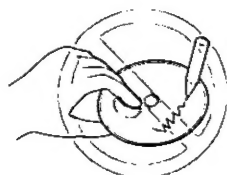


- Do not scratch or smudge the surface of CD.

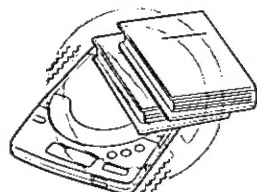


- Do not place heavy objects on the player.
- Do not shake or subject to intense vibration.

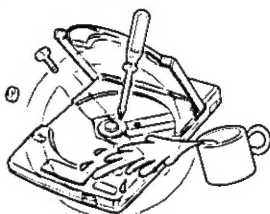

- Do not disassemble the player.
- Do not spill liquid.

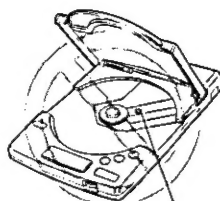

- Do not touch the lens.

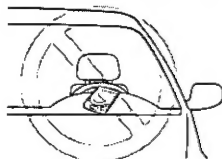


- Do not expose the player to direct sunlight or extreme heat. Especially do not leave it in a hot automobile.

- Keep disc cover closed to protect from dust.
- Do not play CD-ROM/audio CD while transporting.
- Do not use near any appliance that may cause vibration.


# Part Names

## ■ Top/Side view

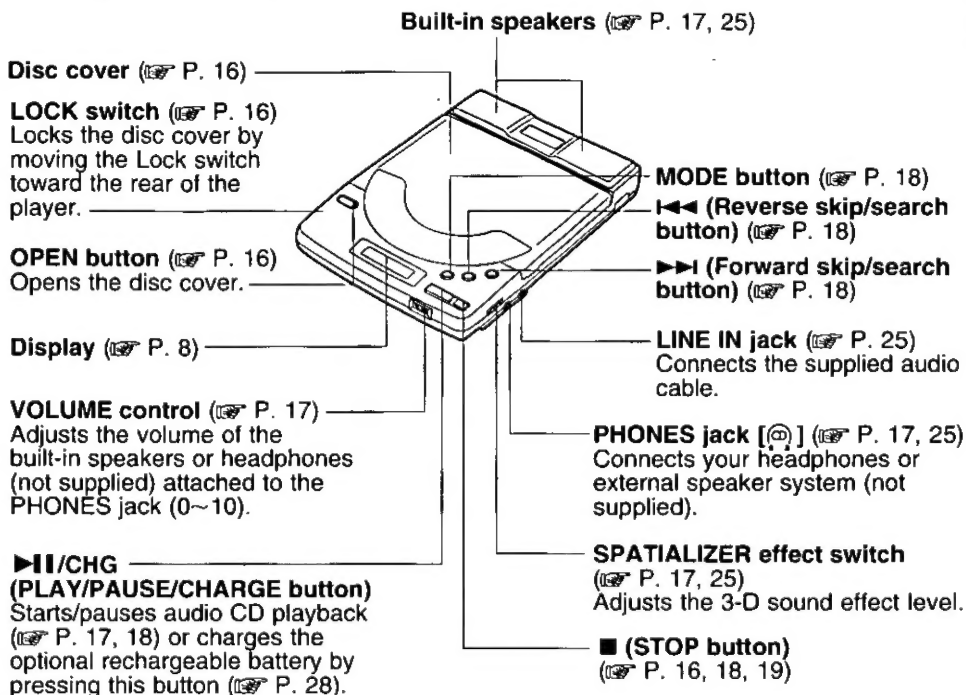

Accessories/Precautions/Part Names

## ■ Rear/Bottom view

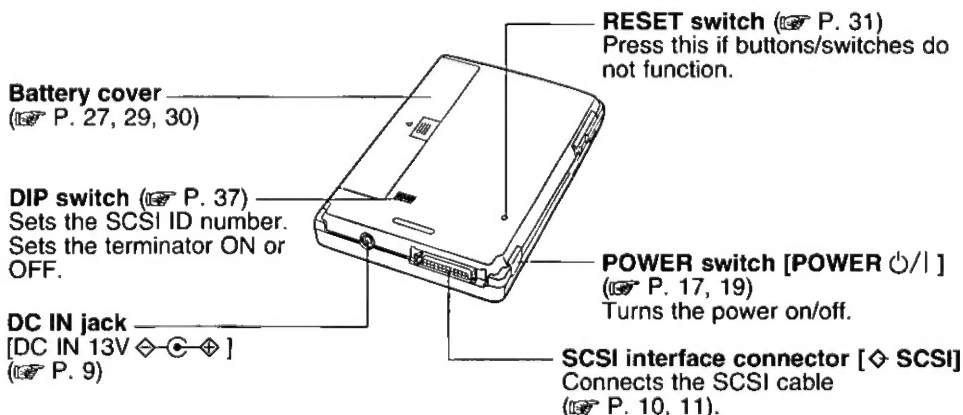


## ■ Display messages

Message/Indication	Description
	The disc cover is open.
	When CD-ROM is inserted, a message "on" is displayed. While CD-ROM or audio CD is first being recognized, "on" blinks.
	CD is not inserted, or the inserted CD is not recognized because either the CD is placed with the label side facing down, or it is damaged, dirty, wet, etc.
	When CD-ROM data is being transferred, a blinking message "BUSY" appears.
	With a CD-ROM (Data CD) inserted in the player, if you press  ,  ,  or  , a blinking message "AUDIO DISC ONLY" appears. These buttons function only for stand alone audio CD playback.
	<ul style="list-style-type: none"> <li>• Displayed when an audio CD is recognized.</li> <li>•  is pressed when an audio CD is being played on the player.</li> </ul>
	Pressing  changes the audio CD playback mode. This button functions only for stand alone audio CD playback. The modes are outlined below.
	<div style="border: 1px solid black; padding: 10px; text-align: center;"> <p>→ [ ONE ] → [ ALL ] →</p> <p>(Repeats one track)      (Repeats all tracks)</p> <p>← [ rand ] ←</p> <p>(Normal mode)      (Repeats at random)</p> </div>
	When the battery is low, this blinking indication appears.
	This blinking indication appears while the rechargeable battery (option) is being charged.



# Connecting the AC adaptor

Connect the supplied AC adaptor.

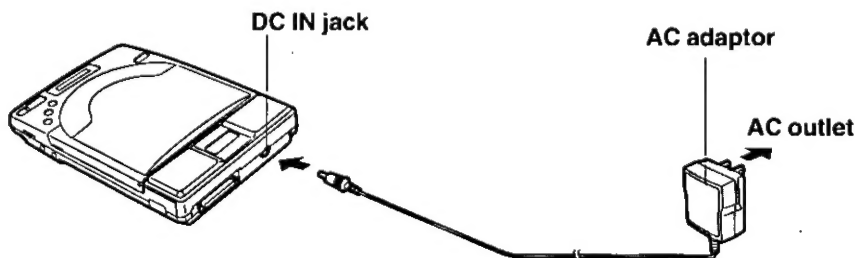

## Caution:

- Use only the supplied AC adaptor, since other adaptors could damage the player.

## Note:

- If the player is not going to be used for an extended period, unplug the AC adaptor from both the player and AC outlet to save power consumption. (Approximately 1 W of power is consumed when the player is OFF and the AC adaptor is connected with 120 V outlet.)

## ■ Power Save Function:

The player enters the Power Save mode under the following conditions to save power. While in the lower consumption mode the laser and spindle motor turn off.

- When using with Macintosh, and no command is sent to the player from the Macintosh for more than 4 minutes. (The player automatically re-activates when it receives a command from the Macintosh.)
- When using the player independently, the player is paused, and no button of the player is pressed for more than 4 minutes. (The player automatically re-activates when a button on the player is pressed.)



Part  
Names



Connecting the AC adaptor

# Connecting the Player to Macintosh


## For PowerBook

**Note:**

- Use only the supplied SCSI cable with this player.

### 1 Make sure both the player and the PowerBook are off.


<Example>

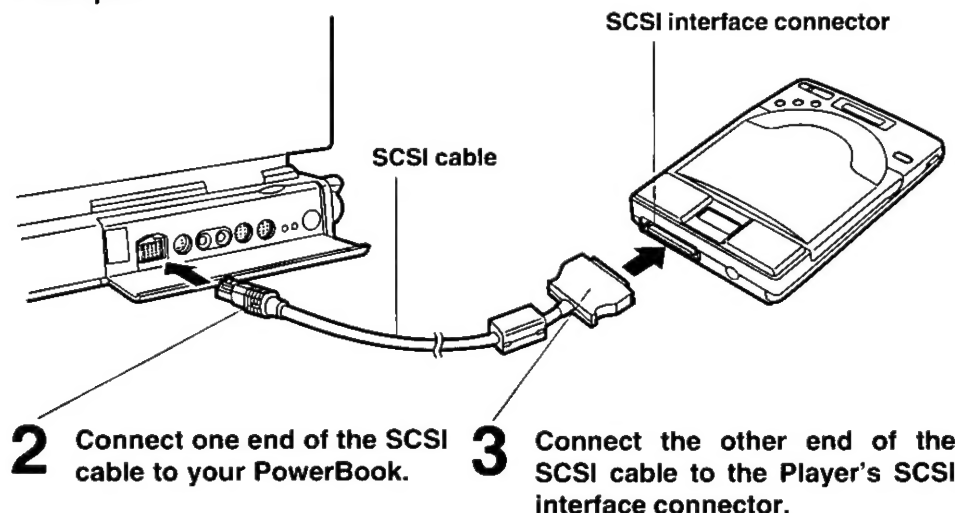

**Note:**

- Make sure that the terminator is set to ON (P. 37).

### ■ Disconnecting SCSI cable from PowerBook:

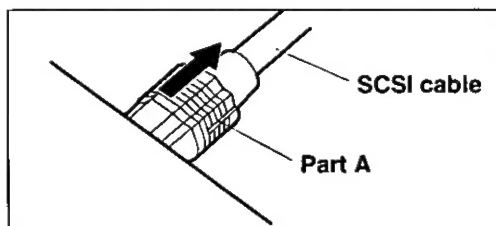

Hold the part A of the SCSI cable and pull it outward.

**Note:**

- Do not pull on the SCSI cable.

# Connecting the Player to Macintosh

## For Desktop Macintosh


For connection, a commercial SCSI cable for Macintosh is required.

### Cautions for a SCSI cable:

- Use a shielded SCSI cable of 1 m (3.2 ft.) or shorter.
- Plug D-Sub25 pin end into Desktop Macintosh and the half-pitch 50 pin end into the player.

First make sure both the player and the Desktop Macintosh are off.

<Example>

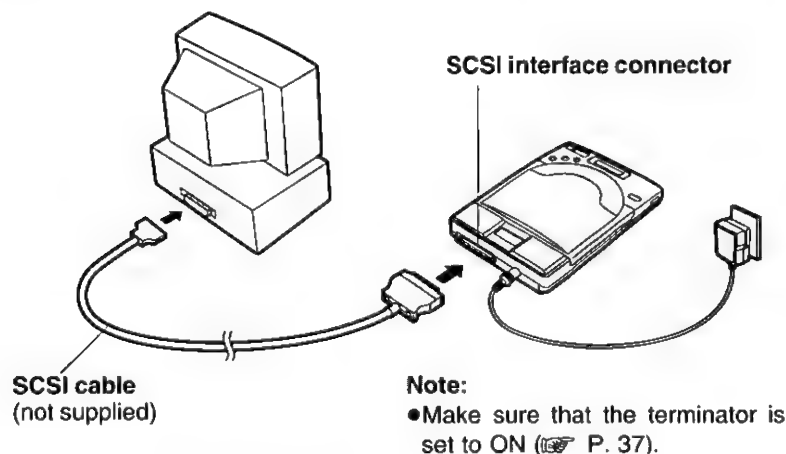

### ■ Daisy chain connection:

You can connect this player to other SCSI devices (up to seven devices). Make sure that each SCSI device has different SCSI ID number.

For the setting of SCSI ID number and terminator of this player, refer to "SCSI ID Number and Terminator Setting" (P. 37).

Since the player has only one SCSI connector, it must be the last device in the daisy chain. In this case, set the terminator to ON.



Connecting to a PowerBook/Desktop Macintosh

# Software Installation

## Before installing software

To use the player with your Macintosh, you must install driver software on your Macintosh. **Make sure that you have connected the player to your Macintosh, then turn on the player and your Macintosh.**

## System requirement

The Setup disk can be used only in Macintosh with a 3.5" floppy disk drive. Hardware and Software requirements are:

- Macintosh Plus or later
- System 6.0.4 or later (System 7 or later is recommended)
- 4 MB of RAM or greater (More is helpful)
- Disk caching requires 1.5 MB of free contiguous hard disk space (More is helpful)

## Making back-up copy

Before installation, it is recommended that you make a back-up copy and store the original in a safe place. To make a back-up copy, refer to your Macintosh manual.

## Disabling old CD-ROM device driver

Before installation, you must disable any previously installed CD-ROM device driver software on your Macintosh to load and activate this software smoothly.

To disable Apple's or any third-party device driver, simply drag the file from the System folder and restart your Macintosh.

## Installation

### Notes:

- Before proceeding with the installation, restart your Macintosh with all Extensions off, making sure to disable any virus protection software.
- The installation will place Foreign File Access, Audio CD Access, High Sierra File Access, and ISO 9660 File Access into the Extensions Folder inside your System Folder. If these files have already been placed into the Folder, they will be re-written.

### 1 Insert the supplied Setup disk into the floppy drive.

The CD-ROM ToolKit window will automatically appear.


"Read Me for Panasonic" File describes the information which is not mentioned in this manual. Please read it when it is necessary.

### 2 Double click the "CD-ROM ToolKit™ Installer" icon.

The CD-ROM ToolKit Installer dialog will appear.

### 3 Click **Continue**.

The following screen will appear.

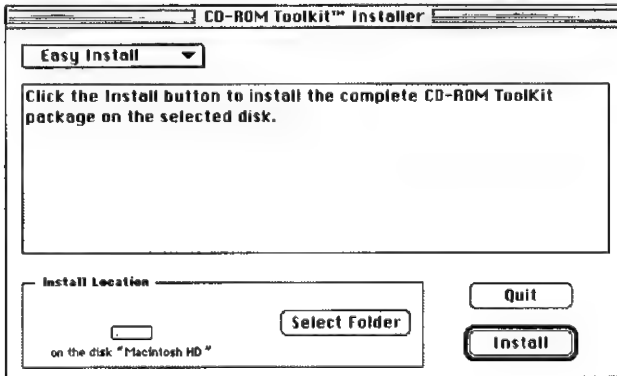

**Easy Install**, **Custom Install** or **Remove** can be selected.

Click **Easy Install** and select which you want.

**Easy Install** . . . . . All files relating to CD-ROM ToolKit that on the Setup disk will be installed.

**Custom Install** . . . Only the files you specify will be installed.

**Remove** . . . . . Any installed CD-ROM ToolKit will be removed.

**Select Folder** . . . A destination folder for CD-ROM ToolKit can be specified.


**Quit** . . . . . Installation will be stopped.



# Software Installation

## 4 Click **Install**.

The following screen will appear.

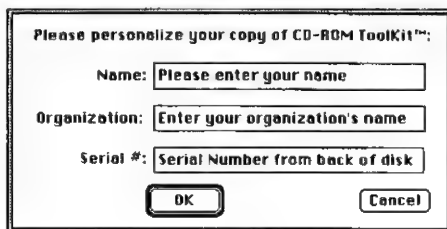

Please personalize your copy of CD-ROM ToolKit™:

Name:

Organization:


Serial #:


## 5 Personalize CD-ROM ToolKit if you are running it for the first time.

Name, Organization and Serial # "M53006585" must be entered.

## 6 Click **OK**.

The following message will appear.

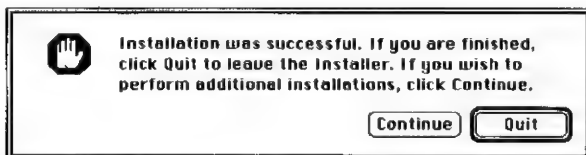

 Installation was successful. If you are finished, click Quit to leave the Installer. If you wish to perform additional installations, click Continue.

If you click **Continue**, return to "CD-ROM ToolKit™ Installer" screen (P. 13).

## 7 Click **Quit**.

## 8 Restart your computer.

The original Setup disk will be ejected automatically.

### Note:

- Store the original Setup disk in a safe place.

## 9 Open the Control Panel from Apple ( ) Menu.

## 10 Double click the “CD-ROM ToolKit™” icon.

(If you are using System 6.0.x click “CD-ROM Tool...” icon.)

The CD-ROM ToolKit Control Panel will appear.

Confirm that the check box next to SCSI ID number of this player is on. The factory setting of SCSI ID number of this player is set to 5.




☐ : OFF  
☒ : ON

For detailed information about CD-ROM ToolKit Control Panel, refer to “Details of CD-ROM ToolKit” (P. 26).

## 11 Click the close box.

The following message will appear.

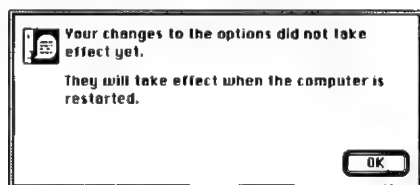

## 12 Click [OK].

## Confirmation of proper driver installation

1 Restart your Macintosh.

2 Insert a CD into the player (P. 16).


- If the CD icon is displayed, the driver has been installed properly.
- If the CD icon is not displayed, please refer to the “Troubleshooting” (P. 31).




# Inserting/Removing a CD

## Inserting a CD

Make sure that the LOCK switch is not moved toward the rear of the player.

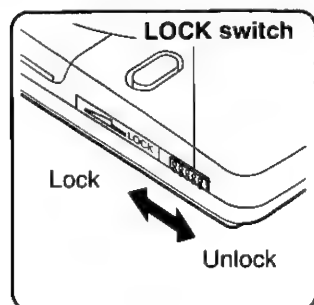



- 1** Press  to open the disc cover and then raise it.
- 2** Place a CD onto the disc spindle. Press on the center of a CD until it locks onto the spindle.
- 3** Close the disc cover.

### Note:

- When transporting the player, remove the CD and move the LOCK switch toward the rear of the player, otherwise the disc cover may open and the player or the CD could get damaged.

## Removing a CD

Make sure that a blinking message "BUSY" does not appear on the player's display, and the LOCK switch is not moved toward the rear of the player.

- 1** Press .
- 2** After the CD stops spinning, press  to open the disc cover and then raise it.
- 3** Carefully remove the CD by lifting it. Pressing on the disc spindle, lift the CD by holding its edge.
- 4** Close the disc cover.



# Using the Player Independently

## Playing an audio CD

You can listen to the music through the player's built-in speakers or your headphones/ external speaker system (not supplied) connected to the PHONES jack. The player is not specially designed to be used while walking, etc.

### Caution:

- It is not safe to listen to headphones while driving a car.

Be sure the **VOLUME** control is turned down (set to 2~4) before playing an audio CD.

Inserting/  
Removing a CD



**1** Press **POWER** switch to turn on the player.

**2** Insert an audio CD (P. 16).

**3** Press **PUSH**.

**4** Rotate the **VOLUME** control to adjust the volume.

Elapsed time  
Audio CD's track number

**SPATIALIZER effect switch**

Light effect — Heavy effect

OFF . 1 . 2

Adjust this switch for best listening enjoyment.




Using the Player Independently

### Notes:

- For monophonic sound sources you do not get 3-dimensional sound effects even the **SPATIALIZER** effect switch is activated.
- It is recommended that the terminator of the player is set to **OFF**. Power consumption can be saved (P. 37).


# Using the Player Independently

## ■ Buttons function and operation:

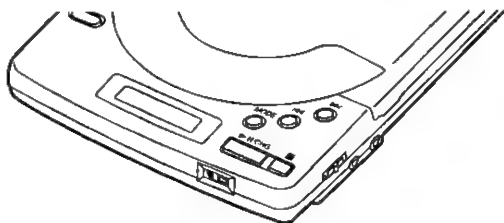

Function	Operation
Starts/pauses audio CD playback.	Press  .
Stops audio CD playback.	Press  .
Skips to the next track number.	Press  once.
Returns to the beginning of the track being played.	Press  once.
Skips to the previous track number.	Press  once when the elapsed time is 00:00.
Advances to your desired point.	Keep pressing  .
Reverses to your desired point.	Keep pressing  .
Repeats the track being played.*	Press  until "ONE" is displayed.
Repeats all tracks.*	Press  until "ALL" is displayed.
Repeats tracks at random.*	Press  until "rand" is displayed.

\* Every time is pressed, the mode changes in the following order.

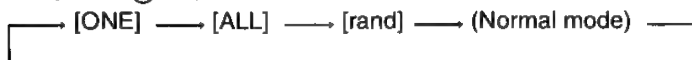


### Notes:

- To cancel the Repeat mode (\*), press . The mode is returned to Normal mode.
- When the blinking message "on" is displayed, the buttons , , , and can not be used.


# Using the Player with Macintosh

Make sure that all the necessary preparation is done (P. 9~11) and your Macintosh has been set up properly (P. 12~15).

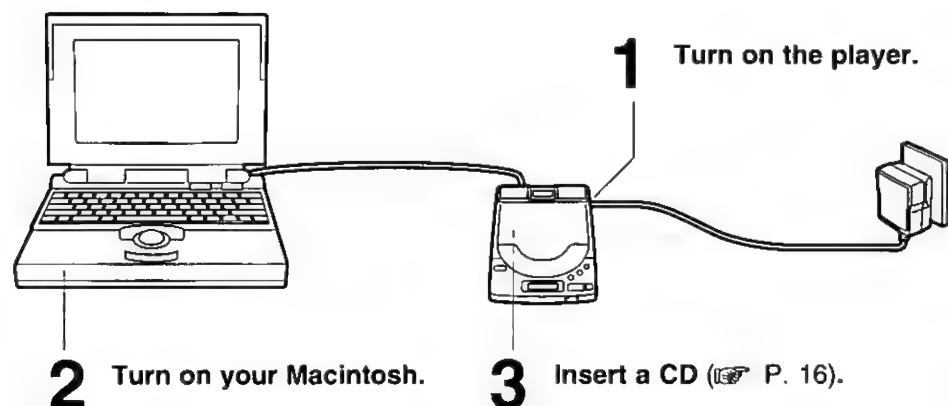

## <Example>




### Notes:

- When "BUSY" is displayed on the player's display;
  - Do not open the disc cover.
  - Do not press .
  - Do not turn off the player.

Otherwise, your Macintosh may hang up. If this happened, reset your Macintosh.

- If the Macintosh is turned on before the player, the player may not be recognized and cause a malfunction.
- Do not turn off the player before the Macintosh. This may cause malfunction of the Macintosh. If this happens, turn on the player or reset the Macintosh.
- To remove a CD from the player, exit an application, press , then remove the CD.
- When using the player with battery if  is displayed on the player's display, quickly connect the AC adaptor. Otherwise your computer may hang up.
- When using battery, you might notice the data transfer speed slows and access time increases.

- When  is pressed, a CD stops playing. To resume playing the CD, send a command from the Macintosh to the player.



Using the Player Independently/  
Using the Player with Macintosh

# *Using the Player with Macintosh*

## **Playing a CD-ROM**

To use a CD-ROM, refer to the manual included with a CD-ROM or "README" file included on the CD-ROM.

## **Playing a Photo CD**

For best use of Kodak's Photo CDs, we recommend using two Apple Extensions: QuickTime 1.5\*<sup>1</sup> or later and Apple Photo Access\*<sup>2</sup>.

\*<sup>1</sup> This is available through reseller, on several on-line service and on AppleLink.

\*<sup>2</sup> This is available on the Internet and on AppleLink.


To view images stored on Photo CDs, use any program that can view PICT files in conjunction with QuickTime.

To view and edit the images, you can use a application program such as Adobe Photo shop.

### **Notes:**

- QuickTime does not operate on some Macintosh such as Macintosh Plus, SE, Classic, Portable and PowerBook 100.
- If you are using System 6.0.x, Photo CD can not be played without MultiFinder.

## **Playing a CD Extra**

- 1** Open the Control Panel from Apple (  ) Menu.
- 2** Double click the "CD-ROM ToolKit™" icon.
- 3** Click **Options**.
- 4** Click on the check box of "Upon CD inserts, search every track for possible data to mount".
- 5** Restart your Macintosh.

### **Note:**

- When playing a CD other than CD Extra, click off the check box of "Upon CD inserts, search every track for possible data to mount". If not, it could not be recognized properly or could not be activated. For the details, refer to "Playing Audio tracks of multimedia data discs" in "Read Me for Panasonic" file in the supplied Setup disk.

## Starting up Macintosh from a CD-ROM


System Software can be started up Macintosh from a CD-ROM with the player. Make sure that the player and your Macintosh are connected.

- 1 Insert CD-ROM for System Software into the player.**
- 2 Make sure that caps lock key is not pressed.**
- 3 Turn on your Macintosh while pressing shift, option, command (⌘) and delete keys at the same time.**  
Press the keys until a startup window of the System Software appears.

## Playing an audio CD

"Audio CD" icon (🎵) appears on the screen when audio CD is inserted in the player. Double-clicking the icon, the files named track 1, track 2, etc., appear as follows.

<Example>

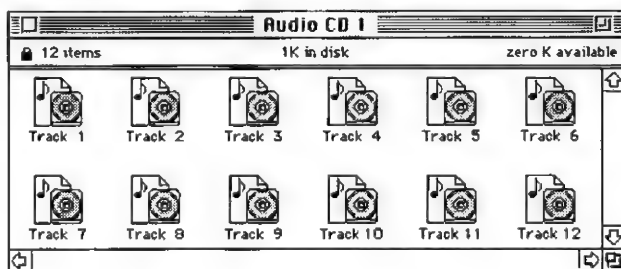

You can play these by simply double-clicking on individual tracks. CDT Remote Panel (🔍 P. 22) will appear and CDT Remote automatically scans the disc inserted in the player and displays the first track in the Elapsed Time Window.

The functions of each CDT Remote button are shown on P. 22, 23.


### Note:

- If you are using System 6.0.x, CDT Remote Panel will not appear automatically by double-clicking on track. To activate the CDT Remote, double-click CDT Remote icon in the CD-ROM ToolKit Extras Folder.





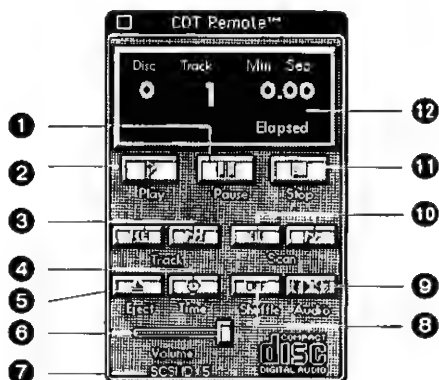

# Using the Player with Macintosh

## CDT Remote Panel




### Notes:

- While using the player with a Macintosh, the buttons , ,  and  on the player can not be used.
- The sound of an audio CD is heard from the built-in speakers of the player.

No.	Button	Function
1	Pause	Pause/starts audio CD playback by clicking it.
2	Play	Starts playing the track displayed in the Elapsed Time Window by clicking it.
3	Track ►►	Skips to the beginning of the next track by clicking it.
	Track ◄◄	Skips to the beginning of the current track by clicking it. Goes to the previous track by clicking subsequently.
4	Time	Toggles between displaying the elapsed time for the current track and the time remaining for the current track by clicking it.
5	Eject*	Stops audio CD playback and drags the CD icon into the trash by clicking it. To play the same CD again, open and close the disc cover of the player.

\* CD will not be ejected automatically because this CD-ROM player is not a tray type.


# Using the Player with Macintosh

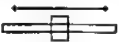
No.	Button	Function
6	Volume	<p>Adjusts the volume from the CD-ROM drive output to the player's built-in speakers or headphones. If the volume of the player is set to 0, no sound can be heard.</p> <p>This control works in conjunction with the player's volume control.</p> <p style="text-align: right;">Lower  Higher</p>
7	SCSI ID	Shows the SCSI ID number of the CD-ROM player selected.
8	Shuffle	Plays the tracks on the inserted CDs in random order until each is played by clicking it.
9	Audio	<p>Selects different audio channels for play through the player's built-in speakers or headphones by clicking it. The factory setting is set at STEREO.</p> <p>STEREO → STEREO from Left → STEREO from Right            → Left channel from both sides            → Right channel from both sides → MONAURAL</p>
10	Scan ►►	Skips forward repeatedly in the audio portion played through the player's built-in speakers or headphones by holding it down while playing an audio track.
	Scan ◄◄	Skips backward repeatedly in the audio portion played through the player's built-in speakers or headphones by holding it down while playing an audio track.
11	Stop	Stops audio CD playback and returns to the beginning of the current track by clicking it.
12	Elapsed Time Window	Displays the status information about the current track.



# Using the Player with Macintosh

If you move the cursor to the Menu bar item "Player" while the CDT Remote Panel is displayed, the following commands will appear. The functions of each command are shown in the table below.

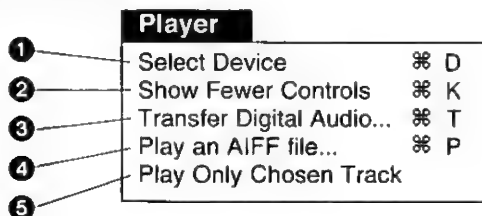

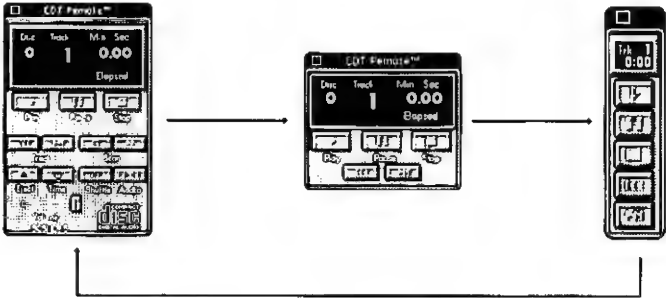No.	Function
1	If you have more than one CD-ROM drive, CDT Remote automatically picks the drive with the lowest SCSI ID number. You can select another drive by choosing Select Device from the CDT Remote menu.
2	<p>If you prefer to have CDT Remote take up less room on your screen, you can choose Show Fewer Controls and the CDT Remote window will shrink to less than half the size while still keeping the most important control buttons. Your selection will be saved, so the next time you run CDT Remote it will display the preferred size.</p> 
3	This function is not supported.
4	Playback of AIFF files at 16 bit quality, when possible, is also supported. The playback will function in the background, while you work, and will give much better performance than tools such as Apple's MoviePlayer 2.0. This menu item will not be displayed if QuickTime 1.6 or later, or Sound Manager 3.0 is not present.
5	This command will restrict CDT Remote to playing only the track that is currently displayed in the Elapsed Time Window.



## Listening to PC sound through the player


PC sound can be heard through the player's built-in speakers or headphones attached to the player's PHONES jack by connecting the supplied Audio cable to the Macintosh's Sound Output port and to the player's LINE IN jack.

### Notes:

- Whenever connecting/disconnecting the Audio cable, be sure that the player's VOLUME control is set to the lowest level (0).
- Audio cable cannot be connected to some Macintosh which do not have Sound Output port.
- For monophonic sound sources you do not get 3-dimensional sound effects even the SPATIALIZER effect switch is activated.
- If you hear a distorted sound from the built-in speakers, lower the volume of your Macintosh.

Connect the supplied Audio cable.

<Example>

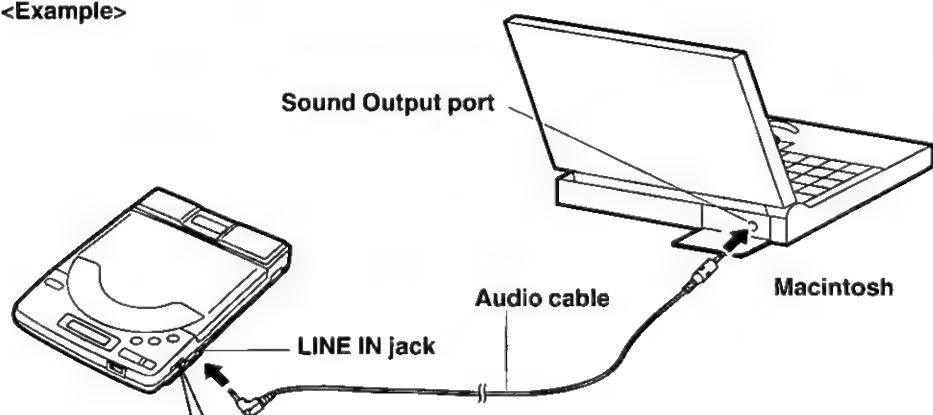

### SPATIALIZER effect switch

Light effect — Heavy effect

OFF 1 2



Adjust this switch for best listening enjoyment.



## Details of CD-ROM ToolKit


Setup disk includes a convenient Control Panel that allows users to automatically accelerate and configure all discs for optimum performance.

To open the Control Panel, follow the steps below.

**1** Open Control Panel from Apple (  ) Menu.

**2** Double click "CD-ROM" ToolKit icon.

After opening the Control Panel, CD-ROM ToolKit will automatically scan the SCSI bus and identify the device at each SCSI address in the right column.

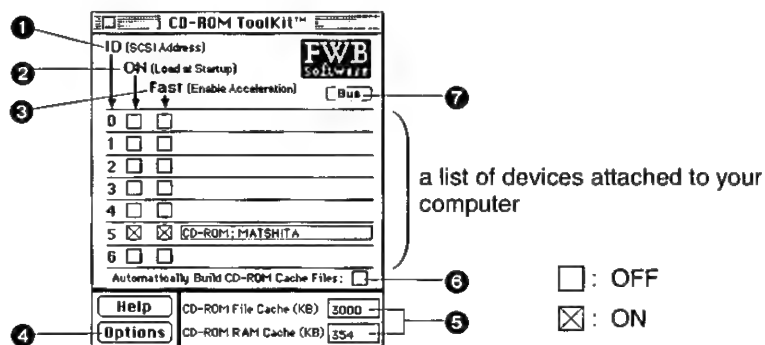

No.	Function
①	SCSI ID number
②	Allows you to designate whether you want CD-ROM ToolKit's device driver to be loaded at Startup. This feature provides users with an easy way to turn off CD-ROM ToolKit's driver should you wish to run another CD-ROM driver, such as Apple's.
③	Allows you to turn acceleration on or off for individual SCSI IDs.
④	Provides access to specific caching features.
⑤	Allows you to edit the amount of memory allocated to the cache. This number can be changed by clicking in the box and typing a new number.
⑥	By checking this, CD-ROM ToolKit starts caching file and directory information to the hard disk automatically when you insert a CD-ROM disc.
⑦	Allows you to view devices on any active SCSI Manager 4.3 compatible bus on your Macintosh by clicking it. The <b>Bus</b> will not appear unless more than one SCSI bus is present.

Click **Help** for further information.

# Using Rechargeable Battery (option)


Optional rechargeable battery (KXL-D30) needs to be purchased. Before initial use, please fully charge the rechargeable battery (P. 28).

## Note:

- When using the rechargeable battery, you might notice the data transfer speed slows and access time increases.

## Installing rechargeable battery

Make sure that the AC adaptor is disconnected.

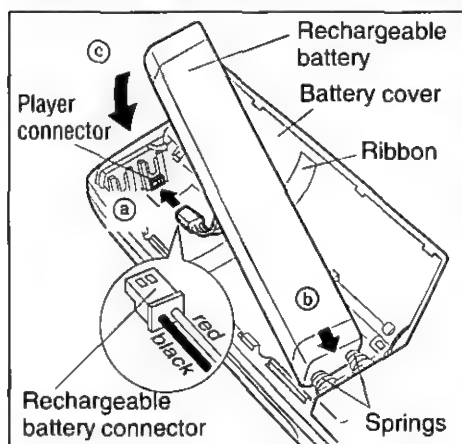

- Open the battery cover by sliding and lifting it up.
- Insert the rechargeable battery connector into the player connector (a).
- Install the rechargeable battery (c) placing the ribbon underneath it and pressing the springs (b).
- Close the battery cover by pressing it down and sliding it back.

## Notes:

- Make sure that the battery's connector cable is fixed inside the battery cover, otherwise the cable could get damaged.
- If the player is not going to be used for more than two (2) months, remove the rechargeable battery to maintain the battery life.


- Power Save Function is effective (P. 9).
- When an audio CD is played in the Normal mode on the player using the rechargeable battery, the power automatically goes off after the last track has been played.



# Using Rechargeable Battery (option)





## Charging rechargeable battery

 
Charge the rechargeable battery:

- Before initial use.
- When the blinking mark " appears on the player's display.

### Caution:


- Do not attempt to charge the rechargeable battery using a charger other than this player.

- 1** Install the rechargeable battery ( P. 27 "Installing rechargeable battery").
- 2** Connect the supplied AC adaptor ( P. 9).
- 3** Turn on the player by pressing the POWER switch.
- 4** Press  on the player until the blinking mark " appears.


Charging starts and it will finish automatically when the mark " disappears and the power goes off. A full battery charge requires a maximum of three (3) hours.

- To stop charging, turn off the power.

### Notes:

 - The charging time may change depending on the charging capacity of the rechargeable battery.
- While charging, no other operation can be performed.
- If the blinking mark " appears on the player's display while using the rechargeable battery with the Macintosh attached, quickly connect the AC adaptor. Otherwise the Macintosh may hang up.

## ■ Trickle charging function:






Charging starts automatically when the rechargeable battery is installed, the AC adaptor is connected and the power is on. While being charged the mark " does not appear on the player's display.

In this case, a full charge may not be done. To charge the rechargeable battery fully, follow the steps 1 to 4 above.

# Using Rechargeable Battery (option)
 
## Refreshing rechargeable battery

If the rechargeable battery seems to run down sooner than usual (maybe because of repetitive short-term charging and discharging), refresh the rechargeable battery two to three times by following the instructions below.

- 1 Disconnect the player from your Macintosh and the AC adaptor.
- 2 Play an audio CD repeatedly to completely discharge the rechargeable battery.
  - Press  until "ALL" is displayed and play an audio CD repeatedly until the  mark appears and the power goes off.
- 3 Connect the AC adaptor, turn on the player and press  on the player until the blinking mark " CHG" appears.
- 4 Charge the rechargeable battery until the mark " CHG" disappears and the power goes off.

## Replacing rechargeable battery


Replace the rechargeable battery:

- If the rechargeable battery quickly runs down even after refreshing (it has reached the end of its life).

### Note:

- The rechargeable battery will cycle approximately 300 times under optimum condition.

### ■ Removing the rechargeable battery:

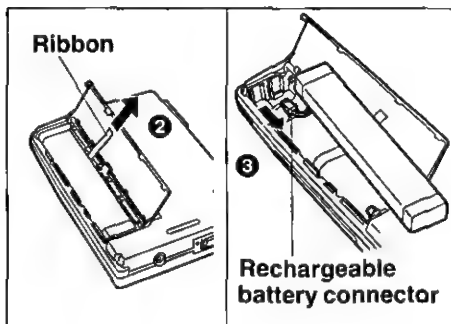

- 1 Open the battery cover.
- 2 Pull the ribbon upward.
- 3 Disconnect the rechargeable battery connector by pulling its cable carefully, then remove the rechargeable battery.
- 4 Close the battery cover.


# Using Alkaline Batteries (not supplied)

Six (6) "AA" size alkaline batteries are required.

## Alkaline battery Precautions:

If improperly used, the batteries may leak and cause corrosion. Therefore, observe the following:


- Install batteries according to the diagram.
- Do not mix old and new batteries, or carbon and alkaline battery types.
- Remove all batteries when not using the player for extended periods.
- Do not charge, short-circuit, disassemble, heat, or dispose of in fire.

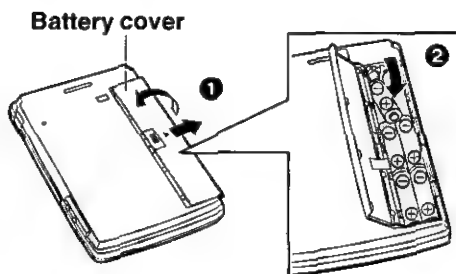

- 1 Open the battery cover by sliding and lifting it up.
- 2 Install six (6) "AA" size alkaline batteries (not supplied) placing the ribbon underneath them. Make sure the polarities (+, -) match the diagram.
- 3 Close the battery cover by pressing it down and sliding it back.

## ■ Replacing the Batteries:

### Removing:

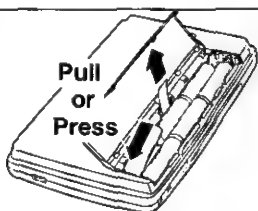

Replace the batteries when blinking mark "⏏" appears on the player's display.





### Notes:

- When using alkaline batteries, you might notice the data transfer speed slows and access time increases.
- If the blinking mark "⏏" appears on the player's display while using the alkaline battery with the Macintosh attached, quickly connect the AC adaptor. Otherwise the Macintosh may hang up.

- Power Save Function is effective (⏏ P. 9).
- When an audio CD is played in the Normal mode on the player using alkaline batteries, the power automatically goes off after the last track has been played.





# Troubleshooting

If trouble occurs, check the following points before returning the player for service.




Trouble	Possible Cause	Solution
Turn on the POWER switch, but nothing appears on the display.	AC adaptor is not plugged into the outlet or DC IN jack correctly.	Plug in the AC adaptor correctly (P. 9).
	The Auto Protect function of AC adaptor is working.	Disconnect the AC adaptor and connect it again after 2~3 minutes.
	The alkaline batteries or rechargeable battery are/is not installed correctly, or dead.	Install the alkaline batteries/rechargeable battery properly, charge the rechargeable battery or replace with new batteries (P. 27~30).
An audio CD is inserted and the power is on, but buttons on the player do not function.	When an audio CD is being played with Macintosh,  ,  ,  or  is pressed.	While playing an audio CD with Macintosh, these player's buttons do not function. Use the CDT Remote Panel to play an audio CD with Macintosh (P. 21, 22).
The player can not be turned off.	System lockup.	Press RESET switch located at the bottom of player by using a pointed object like a pen (do not use a pencil).
Player (especially center spindle), rechargeable battery or AC adaptor is warm.		This is not abnormal. If they become hot, consult your dealer.
Disc cover can not be opened.	The LOCK switch is moved toward the rear of the player.	Move the LOCK switch to opposite direction.
The optional rechargeable battery can not be charged.	AC adaptor is not connected, the rechargeable battery is not installed or POWER switch of the player is not on.	Connect the AC adaptor, install the rechargeable battery or turn on the POWER switch of the player.
The optional rechargeable battery runs down too soon.	The rechargeable battery capacity has been reduced and the battery life has been shortened by being charged too often after using for short periods.	Refresh the rechargeable battery (P. 29). If the battery runs down quickly even after refreshing, replace with new one (P. 29).



# Troubleshooting

Trouble	Possible Cause	Solution
Transmission speed of data slows down.	Using the player with the alkaline batteries/rechargeable battery.	Use the AC adaptor.
	QuickTime is being used.	Please refer to "QuickTime playback" of the "CD-ROM ToolKit" in "Read Me for Panasonic" file in the supplied Setup disk (P. 13).
"no DISC" message appears on player's display even after inserting a CD. Sound skips, or data can not be read.	CD is placed with the label side facing down.	Place the CD with the label side facing up (P. 16).
	CD without  or  mark is used.	Use the CD marked with  or  .
	CD or the lens of the player may have become dirty.	Clean the CD or the lens of the player (P. 36).
	CD is damaged.	Replace with another CD.
	Dust such as a hair lay on the disc spindle.	Clean the disc spindle.
	The player or/and CD are damp or moist, because the player or/and CD may have been moved from a cold place to a warm place.	Remove the CD from the player and do not use the player and CD for about 1 hour.
You can not listen to sound through the built-in speakers of the player.	Headphones are connected to the PHONES jack of the player.	Disconnect the headphones.
	The player's VOLUME control is set to "0".	Set the player's VOLUME control to a higher level.
	■ When listening to PC sound: The Audio cable is not connected to the player's LINE IN jack and to the Macintosh's Sound Output port properly.	Connect the Audio cable properly (P. 25).
	■ When listening to PC sound: The volume of the Macintosh is set to low or the mute setting is on.	Adjust the Macintosh's volume to higher or click off the mute setting.
	■ When listening to an audio CD: The volume of CDT Remote Panel is set to left most.	Adjust the volume by setting it to right side (P. 22).



Trouble	Possible Cause	Solution
<p>CD-ROM ToolKit icon does not appear when starting Macintosh.</p> 	<p>CD-ROM ToolKit has not been loaded properly.</p>	<p>Reinstall the software (P. 12~15).</p>
<p>CD-ROM ToolKit is not loaded properly. (When starting Macintosh, following icon appears.)</p> 	<p>CD-ROM driver other than CD-ROM ToolKit is being used.</p>	<p>Remove the CD-ROM driver other than CD-ROM ToolKit from System Folder and restart your Macintosh.</p>
<p>Your Macintosh does not recognize the player (When starting Macintosh, following icon appears), or does not function properly.</p> 	<p>Your Macintosh is not setup correctly.</p>	<p>Install the software by using the supplied Setup disk (P. 12~15).</p>
	<p>Macintosh is turned on before turning on the player.</p>	<p>Turn on the player, then turn on your Macintosh.</p>
	<p>The SCSI cable is not connected to the player or to Macintosh properly.</p>	<p>Properly connect the SCSI cable (P. 10, 11).</p>
	<p>The SCSI cable pin is bent or broken.</p>	<p>■ When using with PowerBook: Contact your dealer (or contact Panasonic Service Center at 1-800-PANA-SYS for users in continental United States).</p>
		<p>■ When using with Desktop Macintosh: Contact the store which you purchased the SCSI cable.</p>
	<p>There are duplicate SCSI ID numbers for devices in your system.</p>	<p>Set a different SCSI ID number for each device in your system (P. 37).</p>
	<p>The player's terminator is set to OFF.</p>	<p>Set the terminator to ON (P. 37).</p>
	<p>Check the box next to the player's SCSI ID number on CD-ROM ToolKit Control Panel is not on.</p>	<p>Open the CD-ROM ToolKit Control Panel and check the box next to the SCSI ID number of the player (P. 26).</p>

# Troubleshooting

Trouble	Possible Cause	Solution
Malfunction of the Macintosh.	Turning off the player before ending the current job.	Turn on the player or reset the Macintosh (P. 19).
The player does not appear on the list in the CD-ROM ToolKit Control Panel.	The player is not on or the cable is not connected properly.	Turn on the player or connect the cable properly.
	Using Macintosh with the terminator switch of the player OFF.	Turn the terminator switch ON (P. 37).
	The player is conflicting with another device.	Set the different SCSI ID number for each device (P. 37).
CD can not be mounted.	The player is not on, or the cable is not connected properly.	Turn on the player, or connect the cable properly.
	Check box next to the player's SCSI ID number on the CD-ROM ToolKit Control Panel is not ON.	Open the CD-ROM ToolKit Control Panel and check the box next to the SCSI ID number of the player (P. 26).
	Unsupported CD-ROM format is loaded.	Load the CD-ROM such as Photo CD, HSF, High sierra, ISO 9660, Apple ProDOS .
	Mounted icon is not dragged to trash.	Drag the mounted CD to trash and then change the disc.
	File accessible to different format is installed in the System Extensions Folder.	Install Foreign File Access, Audio CD Access, High Sierra File Access and ISO 9660 File Access into System Extensions Folder.
Mounted CD can not be ejected.	Part of the file is currently in use.	Close the file which is currently in use in Finder and drag the icon.
	File is used in common.	Cancel the common use of the file.
Photo CD can not be read.	For use of Photo CD, QuickTime 1.5 or later and Apple Photo Access are required.	Install QuickTime 1.5 or later and Apple Photo Access into System Folder. These are available through resellers, on several on-line services and on AppleLink (P. 20).

Trouble	Possible Cause	Solution
Distorted sound is heard from the built-in speakers when connecting Audio cable to the player and the computer.	The volume of your Macintosh is set too high.	Lower the volume of your Macintosh.

## Error Messages on Macintosh

Error Message	Possible Cause	Solution
This disk is unreadable by Macintosh.	Foreign File Access, Audio CD Access, High Sierra File Access, ISO 9660 File Access has not been loaded into the Extensions Folder.	Reinstall the software by using the supplied Setup disk.
	CPU accelerator is being used.	Some CPU accelerator can not use blind SCSI I/O. Select the <b>(Options)</b> from CD-ROM ToolKit Control Panel and click on the check box of "Use Slower Polled Non-Blind SCSI I/O" (P. 26).
	■ When playing a CD Extra: The setting to read CD Extra is not on.	Select the <b>(Options)</b> from CD-ROM ToolKit Control Panel and click on the check box of "Upon CD inserts, search every track for possible data to mount" (P. 20).
CD-ROM ToolKit will not be able to support one of your CD-ROM drives because it is already handled by another CD-ROM driver.	CD-ROM driver other than CD-ROM ToolKit is being used.	■ When using the player with other CD-ROM drive(s): Remove the CD-ROM driver other than CD-ROM ToolKit from System Folder. (P. 12)
		■ When using only the player as a CD-ROM drive: Open the CD-ROM ToolKit Control Panel and click off the check box next to the other CD-ROM drive's SCSI ID No. (P. 26)



# Maintenance

## ■ **Player:**


### **Cautions:**

- Do not use benzine, thinner, etc.
- Do not use commercial lens cleaner.

Clean the outside of the player with a soft, dry cloth.



Clean the lens with a dry cotton swab or a lens blower.

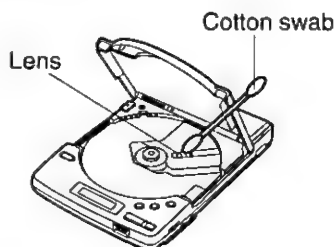

## ■ **CD:**

### **Cautions:**

- Do not use solvents such as benzine, record cleaners or anti-static spray for records.
- Do not touch the signal side.
- Do not attach the labels to the disc.
- Do not write on the surface of disc with a pointed object like a pen.

Wipe from the center to the edge with a dry, soft cloth.



# SCSI ID Number and Terminator Setting

## ■ SCSI ID number:

Each SCSI device connected to your Macintosh can be assigned an individual ID number (refer to the respective manuals). Be sure that the CD-ROM SCSI ID number is not same as another SCSI device connected to the Macintosh.

The factory setting of the player's SCSI ID number is set to 5.

## ■ Terminator:

The factory setting is ON.


**ON:** When the player is connected to the Macintosh (P. 19).  
If SCSI devices are connected, set their terminators to OFF.

**OFF:** When using independently as an audio CD player (power consumption can be saved) (P. 17).

### Setting

**Make sure that the player is off.**

Set the SCSI ID number switch (1~3) or Terminator switch (4) ON/OFF by using a pointed object like a pen (do not use a pencil), and referring to the table below (for SCSI ID number).

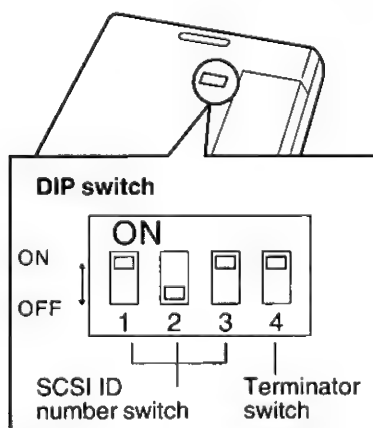

**Example:** SCSI ID number=5  
Terminator=ON

(For SCSI ID number setting)

SCSI ID number	SCSI ID number switch		
	1	2	3
0	OFF	OFF	OFF
1	ON	OFF	OFF
2	OFF	ON	OFF
3	ON	ON	OFF
4	OFF	OFF	ON
5	ON	OFF	ON
6	OFF	ON	ON
7*	ON	ON	ON

☐ : Factory setting

\* Do not use "7" for player's SCSI ID number, since it is used for the Macintosh.

# Specifications

<b>Operating Environment</b> (under no damp or moist conditions):	Temperature: 5°C (41°F) to 35°C (95°F) Humidity: 20% to 85% RH																				
<b>Storage Environment</b> (Non-condensing):	Temperature: -20°C {-4°F} to 55°C {131°F} Humidity: 15% to 85% RH																				
<b>Dimensions:</b>	138 (W)×204 (D)×35 (H) mm {5.52"×8.16"×1.4"}																				
<b>Mass {Weight}:</b>	Approx. 515 g {1.135 lbs.} (without batteries)																				
<b>Power Source:</b>	Refer to the nameplate at the bottom of the unit.																				
<b>Interface:</b>	SCSI-2																				
<b>SCSI Connector:</b>	Half-pitch 50 pin																				
<b>Buffer Size:</b>	128 KB																				
<b>Battery Life</b> * <sup>1</sup> [at 20°C {68°F}]:	<ul style="list-style-type: none"><li>When using Panasonic "AA" size alkaline batteries continuously<table><tr><td></td><td>PHONES jack</td><td>Built-in speakers*<sup>3</sup></td></tr><tr><td>Audio CD*<sup>2</sup></td><td>Approx. 3.5 h</td><td>Approx. 3 h</td></tr><tr><td>CD-ROM</td><td>Approx. 2.0 h</td><td>Approx. 2.0 h</td></tr></table></li><li>When using the optional rechargeable battery continuously<table><tr><td></td><td>PHONES jack</td><td>Built-in speakers*<sup>3</sup></td></tr><tr><td>Audio CD*<sup>2</sup></td><td>Approx. 1.5 h</td><td>Approx. 1.5 h</td></tr><tr><td>CD-ROM</td><td>Approx. 1.0 h</td><td>Approx. 1.0 h</td></tr></table></li></ul>				PHONES jack	Built-in speakers* <sup>3</sup>	Audio CD* <sup>2</sup>	Approx. 3.5 h	Approx. 3 h	CD-ROM	Approx. 2.0 h	Approx. 2.0 h		PHONES jack	Built-in speakers* <sup>3</sup>	Audio CD* <sup>2</sup>	Approx. 1.5 h	Approx. 1.5 h	CD-ROM	Approx. 1.0 h	Approx. 1.0 h
	PHONES jack	Built-in speakers* <sup>3</sup>																			
Audio CD* <sup>2</sup>	Approx. 3.5 h	Approx. 3 h																			
CD-ROM	Approx. 2.0 h	Approx. 2.0 h																			
	PHONES jack	Built-in speakers* <sup>3</sup>																			
Audio CD* <sup>2</sup>	Approx. 1.5 h	Approx. 1.5 h																			
CD-ROM	Approx. 1.0 h	Approx. 1.0 h																			
<b>Data Transfer Rate</b> (when using AC adaptor):	1200 KB/s (8X Velocity mode)* <sup>4</sup> 150 KB/s (Normal Velocity mode)																				

\*<sup>1</sup> When using "SPATIALIZER" function, this may become shorter.

\*<sup>2</sup> When using the player with the terminator OFF.

\*<sup>3</sup> Rated at 30 mW+30 mW output.

\*<sup>4</sup> To conserve power, the data transfer rate becomes 600 KB/s under the following conditions.

- When using optional rechargeable battery or "AA" size alkaline batteries.
- When a warped CD vibrates or the disc is not properly seated.

<b>Access Time*</b> (when using AC adaptor): (The information is based on the test results measured by Panasonic test software.)	1/3 stroke access time 180 ms typical Full stroke access time 280 ms typical	
<b>Power Consumption:</b>	<ul style="list-style-type: none"> <li>• When playing CD-ROM Approx. 15 W [with AC adaptor]</li> <li>• When player is off Approx. 1 W [when AC adaptor is connected with 120 V outlet]</li> </ul>	
<b>Compatible CD, CD-ROM Format:</b>	CD-DA (Audio CD) CD-ROM (Mode 1 and Mode 2 Form 1) CD-ROM XA (Mode 2 Form 2) Photo CD (Multisession) CD Extra	
<b>Error Rates:</b>	Soft read errors	Less than $10^{-9}$
	Hard read errors	Less than $10^{-12}$
<b>Audio Performance:</b>		
Phones out (stereo):	S/N	More than 80 dB (A Range)
	Output level	14 mW (EIAJ) (impedance 16 $\Omega$ )
Line in (stereo):	Input level	1.2 Vrms or lower (impedance 10 k $\Omega$ or higher)
Built-in speakers:	Output level	1 W+1 W (impedance 8 $\Omega$ )
<b>SCSI Cable (for PowerBook):</b>	SCSI connector	Half-pitch 50 pin (pin type) HDI-30
	Cable length	Approx. 480 mm (without connector)
<b>Audio Cable:</b>	Plug	Ø3.5 mini stereo plug
	Cable length	Approx. 800 mm

\* When using optional rechargeable battery or "AA" size alkaline batteries, the access time increases.



# *End-User License Agreement*

## **End-User License Agreement for CD-ROM ToolKit™**

THIS IS A LEGAL AGREEMENT BETWEEN YOU AND PANASONIC. CAREFULLY READ ALL THE TERMS AND CONDITIONS OF THIS AGREEMENT PRIOR TO OPENING THE PACKET OF SOFTWARE PROGRAM. OPENING THE PACKET INDICATES YOUR ACCEPTANCE OF THESE TERMS AND CONDITIONS. If you do not agree to these terms and conditions, return the unopened packet and the other components of the Panasonic CD-ROM Player to the place of purchase and your money will be refunded. No refunds will be given for product that have an opened packet or missing components.

### **1. COPYRIGHT:**

Panasonic has the right to license or has been granted to license the enclosed FWB CD-ROM ToolKit software program ("SOFTWARE"), developed and copyrighted by FWB Software, LLC, 185 Constitution Drive, Suite A, Menlo Park, CA 94025, U.S.A. ("FWB"). You acknowledge that you are receiving only a LIMITED LICENSE TO USE the SOFTWARE and related documentation, and that you shall obtain no title, ownership nor any other rights in or to the SOFTWARE and related documentation, all of which title and rights shall remain with FWB and Panasonic.

### **2. LICENSE:**

(1) You have the non-exclusive right to use the one copy of the SOFTWARE on a single computer used by single user. Installation of the SOFTWARE on a network server for the purpose of distribution to one or more other computers shall not be granted in this Agreement. (2) You may not copy, reproduce, or permit to be copied or reproduced, the SOFTWARE or related documentation for any purpose, except that you may either (a) make a reasonable quantity of copies of the SOFTWARE solely for backup or archival purposes, or (b) transfer the SOFTWARE to a single hard disk, provided that you keep the original solely for backup or archival purposes. All other copies of the SOFTWARE are in violation of this Agreement. (3) You may not rent or lease the SOFTWARE, but you may transfer your right under this License Agreement on a permanent basis, provided that you transfer this Agreement, all copies of the SOFTWARE, all related documentation and your Panasonic CD-ROM Player, and the recipient thereof agrees the terms of this Agreement. (4) You may not reverse engineer, decompile or disassemble the SOFTWARE, except that in European Union and European Free Trade Association, you may have the limited right to reverse engineer, decompile or disassemble the SOFTWARE solely to the extent specifically permitted by the terms and conditions of Article 6 of the European Community's Directive for the Legal Protection of Computer Programs, OJL 122/42 (17 May 1991). (5) You may not use, copy, modify, alter, or transfer the SOFTWARE, or any copy thereof, in whole or in part, except as expressly provided in this Agreement.

### **3. TERM:**

This license is effective until terminated. You may terminate this Agreement at any time by destroying the SOFTWARE and related documentation and all copies thereof. This license will also terminate if you fail to comply with any term or condition of the Agreement. Upon such termination, you agree to destroy all copies of the SOFTWARE and related documentation.



# End-User License Agreement

## 4. LIMITATION OF LIABILITY:

EXCEPT AS STATED ABOVE, NEITHER PANASONIC, PANASONIC'S SUPPLIER NOR FWB MAKES OR PASSES ON TO YOU OR OTHER THIRD PARTY, ANY WARRANTY OR REPRESENTATION INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

NEITHER PANASONIC, PANASONIC'S SUPPLIER NOR FWB SHALL BE LIABLE FOR ANY DAMAGE SUFFERED BY YOU INCLUDING, BUT NOT LIMITED TO, CONSEQUENTIAL, INCIDENTAL SPECIAL OR PUNITIVE DAMAGES. THE ABOVE LIMITATIONS SHALL APPLY REGARDLESS OF THE FROM OF ACTION WHETHER IN CONTRACT, TORT (INCLUDING NEGLIGENCE), STRICT PRODUCT LIABILITY OR OTHERWISE, EVEN IF SUCH PARTY HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

## 5. U.S. Government Restricted Rights

The SOFTWARE and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraph (c)(1) and (c)(2) of the Commercial Computer Software -- Restricted Rights at 48 CFR 52.227-19, as applicable. Manufacture is FWB Software, LLC / 185 Constitution Drive / Suite A / Menlo Park, CA 94025, U.S.A. Subcontractor is Panasonic.

## 6. U.S. Export Control

You agree and certify that neither the SOFTWARE will be transferred or reexported, directly or indirectly, into any country where such transfer or reexport is prohibited by the U.S. Export Administration Act and Regulations thereunder, without the proper authorization of U.S. Government, if required.

## 7. Controlling Law

This Agreement is governed by the law of Japan.

## Copyright Notice

This manual, the software described in it, the product design, and design concepts are copyrighted by FWB Software, LLC (FWB) with all rights reserved. Your rights with regard to the software and manual are subject to the restrictions and limitations imposed by the copyright laws of the United States of America. Under the copyright laws, neither the programs nor the manual may be copied, reproduced, translated, transmitted or reduced to any printed or electronic medium or to any machine-readable form, in whole or in part, without the written consent of FWB.

© 1996 FWB Software, LLC  
185 Constitution Drive  
Suite A  
Menlo Park, CA 94025  
U.S.A.



## A

AC adaptor	6, 9
Accessories	6
Alkaline batteries	30
Apple Photo Access	20, 34
Apple menu	14, 20, 26
Audio cable	6, 25
Audio CD	17, 21

## B

Battery	
"AA" size alkaline	30
Rechargeable (Ni-Cd)	27
Battery cover	7, 27, 29, 30
Built-in speakers	7, 17, 25
Buttons for playing audio CD	18

## C

Cache	26
CD Extra	20
CD-ROM	4, 20, 21, 39
CD-ROM ToolKit	13, 14, 15, 26
CDT Remote	21, 22
Charging rechargeable battery	28
Connection	
AC adaptor	9
Audio cable	25
SCSI cable	10, 11

## D

Daisy chain	11
DC IN jack	7, 9
Desktop Macintosh	11
DIP switch	37
Disc cover	7, 16
Display	7
Display Messages on Player	8

## E

End-User License Agreement	40
Error Messages on Macintosh	35

## F

Features	4
Forward skip/search button	7, 18

## I

Inserting a CD	16
----------------	----

## L

LINE IN jack	7, 25
Listening to PC sound through player	25
LOCK switch	7, 16

**M**

- Maintenance . . . . . 36  
 MODE button . . . . . 7, 18

**O**

- OPEN button . . . . . 7, 16  
 Option . . . . . back cover

**P**

- Part Names . . . . . 7  
 PHONES jack . . . . . 7, 17, 25  
 Photo CD . . . . . 20, 39  
 PLAY/PAUSE/CHARGE  
   button . . . . . 7, 17, 18, 28  
 Playing audio CD . . . . . 17, 21  
 Playing CD-ROM . . . . . 20  
 Power On . . . . . 17, 19  
 Power Save Function . . . . . 9  
 Power Supply . . . . . 9, 27, 30  
 Precautions . . . . . 6

**Q**

- QuickTime . . . . . 20, 34

**R**

- Rechargeable battery . . . . . 27  
 Refreshing rechargeable battery . . 29  
 Removing a CD . . . . . 16  
 Repeat . . . . . 8, 18  
 RESET switch . . . . . 7, 31  
 Reverse skip/search button . . 7, 18

**S**

- SCSI cable . . . . . 6, 10, 11  
 SCSI ID number . . . . . 15, 37  
 SCSI interface  
   connector . . . . . 7, 10, 11  
 Setting SCSI ID number/  
   Terminator . . . . . 37  
 Setup disk . . . . . 6, 12, 13  
 Software Installation . . . . . 12, 13  
 SPATIALIZER effect  
   switch . . . . . 7, 17, 25  
 Specifications . . . . . 38  
 STOP button . . . . . 7, 16, 18, 19

**T**

- Terminator . . . . . 37  
 Troubleshooting . . . . . 31

**U**

- Using player independently . . . . 17  
 Using player with Macintosh . . . . 19

**V**

- VOLUME control . . . . . 7, 17



## Option

The following option is available through your local Panasonic authorized parts distributor.

**KXL-D30**

**Rechargeable Battery**

## FOR USERS IN CONTINENTAL UNITED STATES ONLY

### Technical Support and Service Parts Calls

If you have read this manual and tried the troubleshooting procedures, and you are still having difficulty, please contact the store from which the unit was purchased. Panasonic Communications & Systems Company will repair this product with new or refurbished parts free of charge for two (2) years from the date of purchase.

You may also call the technical support telephone number (24 hours/7 days).

**The technical support number is: 1-800-PANA-SYS  
(1-800-726-2797)**

**The service parts number is: 1-800-332-5348**

Software drivers are sometimes up dated. You can download the latest driver or new setup disk via your modem.

Internet: [www.PANASONIC.com](http://www.PANASONIC.com)

BBS: @ 201-863-7845

**This product is designed for use only in the country where it was purchased.**

---

**Panasonic Computer Peripheral Company**  
**Division of Panasonic Communication & Systems Company**  
**Unit of Matsushita Electric Corporation of America**  
Two Panasonic Way, Secaucus, New Jersey 07094

**Panasonic Sales Company**  
**Division of Matsushita Electric of Puerto Rico, Inc.**  
San Gabriel Industrial Park, 65th Infantry Avenue KM. 9.5  
Carolina, Puerto Rico 00630

---

**Matsushita Electric of Canada Limited**  
5770 Ambler Drive, Mississauga, Ontario, L4W 2T3

---

**Matsushita Electric Industrial Co., Ltd.**  
Central P.O. Box 288, Osaka 530-91, Japan

---